

Bed Head Bracket Fitting Instructions



Step 1: Unscrew and remove castor




Step 2: Workout the distance you want the bed head to be from the ensemble mattress & base then line the bracket slot up with the thread hole that matches that distance and screw castor in firmly .



Step 3A: Place bedhead on the floor and sit it flush against the brackets ready to measure and mark out screw holes and bracket position.



Step 4: Make a small mark on bedhead where the bracket will be attached

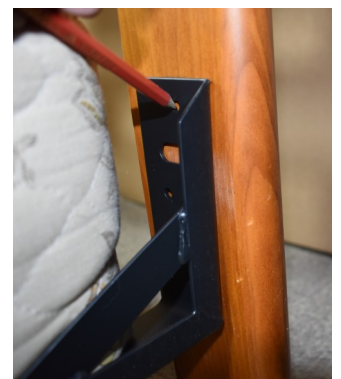

Step 5: Mark screw hole position.



Step 6: Mark bolt hole positions.



Step 7: Remove castors and bed head brackets from the ensemble ready for attaching to bed head.

Turn over page for final steps