

Contents.

- 1 x Pair bed head brackets.
- 4 x bolts & nuts
- 4 x coach bolts
- 10 x self tapping wood screws



Step 8: Lay bed head flat on a bench or flat surface & sit the brackets on the bed head. Line up brackets with pre drawn markings for screws or bolts depending on the thickness & weight of the bed head.




Step 9: For bed heads that are lightweight or sitting on the floor only use self tapping wood screws provided and screw into screw hole marks from Step 5

Step 10: This option is for heavier or larger bed heads. Attach with self tapping screws and coach bolts.

Before screwing in coach bolts pre-drill with a 3mm drill bit and then screw in with a spanner or socket and ratchet.



Tighten firmly but don't over tighten.

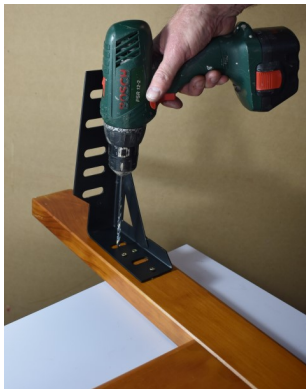

Step 10A: This option is for bed heads with large legs and upholstered bed heads.

Attach with bolts and nuts

Before inserting bolts pre-drill a hole with an 8mm drill bit. Insert bolts and washers and then tighten nut firmly but don't over tighten.

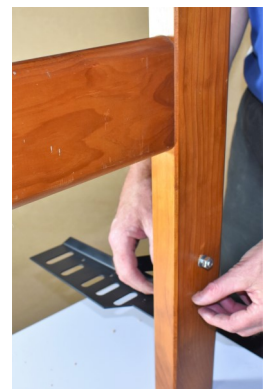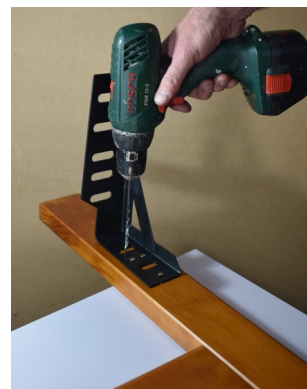

Step 11: When brackets are fitted to bed head reattach to bed ensemble frame



Step 12: When the bed head & brackets are attached to the ensemble, screw the supplied self tapping wood screws into the ensemble frame to stop the brackets from moving sideways.

